


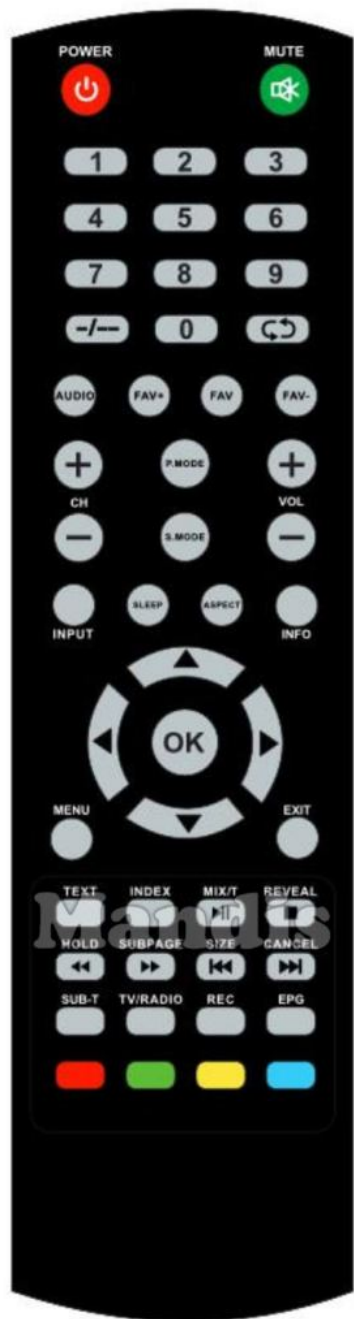

Original	Replacement	Original	Replacement
 Power	 Power	 FAV-	 Shift + Ch -
 Mute	 Mute	 P.Mode	 Media
 1	 1	 S.Mode	 Options
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 Vol+	 Vol +
 5	 5	 Vol-	 Vol -
 6	 6	 Input	 AV
 7	 7	 Sleep	 Sleep
 8	 8	 Aspect	 3D
 9	 9	 Info	 Info
 0	 0	 Menu	 Menu
 -/--	 Shift + Guide	 Exit	 Exit
 Recall	 Back	 Up	 Up
 Audio	 Dual	 Down	 Down
 FAV	 Pre Ch	 Right	 Right
 FAV+	 Shift + Ch +	 Left	 Left





Original	Replacement
OK	Ok
Text	Text
Index	Smart
Play/Mix/T	Play
Pause	Pause
Stop/Reveal	Stop
<</Hold	<<
>>/Subpage	>>
I<<	I<<
>>I/Cancel	>>I
Rec	Rec
Size	Format
EPG	Guide
Tv/Radio	TV/R
Sub-T	Subt
Red	Red
Green	Green

Original	Replacement
Yellow	Yellow
Blue	Blue

