


















Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + Guide / EPG / -/--
	0
	Back / Return
	Picture / Format
	Sound / Title
	Setup / OPT /

Original	Replacement
	Sleep / Timer
	AV / Input / RDS
	CH+ / Page+
	Vol+
	Info / Angle
	CH- / Page-
	Vol-
	Display / Media
	Shift + Step / Freeze / Pause / Step /
	Shift + Picture / Format
	Guide / EPG / -/--
	Up
	Left
	OK
	Right
	Menu / Home
	Down





Original	Replacement	Original	Replacement
 Exit	 Exit / Cancel / Clear	 Green	 Green / APP / Repeat
 Text	 Text / Goto	 Yellow	 Yellow / YouTube / Repeat
 Play	 Play / Slow	 Blue	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze		
 Stop/Hold	 Stop / Hold		
 <<	 << / Tune-		
 Size	 Zoom / Size		
 >>/Reveal	 >> / Tune+		
 I<</Index	 I<< / Preset-		
 >>I/Subpage	 >>I / Preset+		
 Lang	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Rec	 Rec / Rec Mode		
 R.List	 Smart / List		
 TV/Radio	 TV/Radio /		
 Timeshift	 D.Menu / Top		
 Red	 Red / Netflix / Search		

