 

 

 

 

 
 



 
 

















 
Original	Replacement
 Power	 Power
 Input 1	 Shift + 1
 Input 2	 Shift + 2
 Input 3	 Shift + 3
 Input 4	 Shift + 4
 Input 5	 Shift + 5
 PC	 Shift + Fav / Marker / PC
 HMG	 Shift + 6
 [i+]/Timer/Info	 Sleep / Timer
 [i+]/Timer/Info	 Info / Angle
 [ ]	 Shift + Red / Netflix /
 [←]	 Shift + Yellow / YouTube /
 [↔]	 Shift + Green / APP /
 CTRL HDMI	 Picture / Format
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG/DVD Top Menu/Guide	 D.Menu / Top
 EPG/DVD Top Menu/Guide	 Guide / EPG / -/-
 0	 0
 TV/DTV/SAT	 AV / Input / RDS
 P+	 CH+ / Page+
 CH return	 Fav / Marker / PC
 Vol+	 Vol+
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Exit	 Exit / Cancel / Clear







 

 

 

 

 

 

 

 

 

 



 





 



Original	Replacement
	 Up
	 Setup / OPT /
	 Left
	 OK
	 Right
	 Menu / Home
	 Down
	 Back / Return
	 Red / Netflix / Search
	 Rec / Rec Mode
	 Green / APP / Repeat
	 Pause / Step / Freeze
	 Yellow / YouTube / Repeat
	 Stop / Hold
	 Blue / Prime Video / Random
	 Play / Slow
	 I<< / Preset-

Original	Replacement
	 Subtitle / EQ
	 >>  / Preset+
	 Shift + Display / Media
	 << / Tune-
	 Shift + Smart / List
	 >> / Tune+
	 Text / Goto
	 Audio / Lang I/II
	 Smart / List
	 Display / Media





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG/DVD Top Menu/Guide	 Guide / EPG / -/-
 EPG/DVD Top Menu/Guide	 D.Menu / Top
 0	 0
 Vol+ Tv	 Vol+
 Mute Tv	 Mute / Dimmer
 Vol- Tv	 Vol-
 Up	 Up

Original	Replacement
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu/Home	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play	 Play / Slow
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+





Original	Replacement	Original	Replacement
Power	Power	P-	CH- / Page-
[i+]/Timer/Info	Info / Angle	Mute Tv	Mute / Dimmer
[i+]/Timer/Info	Sleep / Timer	Vol- Tv	Vol-
1	1	X/Exit	Exit / Cancel / Clear
2	2	Up	Up
3	3	Left	Left
4	4	OK	OK
5	5	Right	Right
6	6	Menu/Home	Menu / Home
7	7	Down	Down
8	8	Return	Back / Return
9	9		
EPG/DVD Top Menu/Guide	Guide / EPG / -/--		
EPG/DVD Top Menu/Guide	D.Menu / Top		
0	0		
P+	CH+ / Page+		
Vol+ Tv	Vol+		





Original	Replacement	Original	Replacement
Power	Power	Pause	Pause / Step / Freeze
1	1	Stop	Stop / Hold
2	2	Play	Play / Slow
3	3	I<<	I<< / Preset-
4	4	>>I	>>I / Preset+
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
P+	CH+ / Page+		
Vol+ Tv	Vol+		
P-	CH- / Page-		
Mute Tv	Mute / Dimmer		
Vol- Tv	Vol-		
Rec	Rec / Rec Mode		

