

 

 













 


 

 
 
 
 


 
 
 

 





 

 

 

 

 

 

 

 

 

 

 







 





 


 



 
 

 
 

 


 

 

 

 
 




	Original	Replacement		Original	Replacement
	Power		Power		Tracking/V-Lock+  Ch +
	ShowView		Smart		Tracking/V-Lock-  Ch -
	Rec Check		3D		Vol+  Vol +
	Ext Link		Text		Vol-  Vol -
	Rec		Rec		I<< Index  I<<
	1		1		Index >>I  >>I
	2		2		<<  <<
	3		3		>>  >>
	4		4		Stop  Stop
	5		5		Pause/Step  Pause
	6		6		Play  Play
	7		7		Prog Play  Options
	8		8		Menu  Menu
	9		9		Display  Info
	0		0		Exit  Exit
	-/--		Guide		Up  Up
	AV/Input Select		AV		Down  Down





 




 

 

 

 



 

 

 

 

 






 













 
 





 

 

 
 

 
 
 







Original	Replacement	Original	Replacement
	Right		Right
	Left		Left
	Enter		Ok
	Prog/Check		Sleep
	Timer	 + 	Shift + AV
	Output		TV/R
	AV Link		Media
	Audio		Dual
	Tv Aspect/Off		Format
	Music w/Picture		List
	A/Cancel Reset		Red
	B/I-Timer		Green
	C/SP/LP/EP		Yellow
	D/VPS/PDC		Blue











 



 

 


 











 



 




Original	Replacement
 Power	 Power
 Rec Check	 3D
 Ext Link	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 >10	 Guide
 AV/Input Select	 AV
 Tracking/V-Lock/C	 Ch +
 Tracking/V-Lock/C	 Ch -

Original	Replacement
 Vol+	 Vol +
 Vol-	 Vol -
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause/Step	 Pause
 Play	 Play
 Top Menu/Direct Navigator	 Menu
 Play List	 List
 Display	 Info
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left






 





 
 



 
 
 
 
 

 

 
 
 











Original		Replacement		Original	Replacement
	Enter		Ok		
	Timer	 + 	Shift + AV		
	Quick Replay		D. Menu		
	Output		TV/R		
	Subtitle		Subt		
	Audio		Dual		
	Angle/Page		Smart		
	Music w/Picture		Pre Ch		
	Play Mode	 + 	Shift + Play		
	Zoom		Eject		
	Repeat		Text		
	Position		Options		
	A/Cancel Reset		Red		
	B/Cinema		Green		
	C/Group		Yellow		
	D/Setup		Blue		







Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 AV/Input Select	 AV
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -

Original	Replacement
 Tv Aspect	 Format
 A	 Red
 B	 Green
 C	 Yellow
 D	 Blue

