




Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Up		Up		-/--		Guide
	Down		Down		PP		Back
	Right		Right		P/CH+		Ch +
	Left		Left		P/CH-		Ch -
	OK		Ok		P<P		Pre Ch
	M		Menu		Vol+		Vol +
	[i]		Info		Vol-		Vol -
	1		1		Mute		Mute
	2		2		I-II		Dual
	3		3		TV		TV/R
	4		4		AV		AV
	5		5		Red/Sound		Red
	6		6		Green/Picture		Green
	7		7		Yellow/Feature		Yellow
	8		8		Blue/Install		Blue
	9		9		[≡]		Text





Original		Replacement		Original	Replacement
	[≡o]	HOME SMART	Smart		
	[≡+]	PICTURE FORMAT	Format		
	[≡x]/[· ·]	ECO 3D	3D		
	[/≡]/[*]	AD SUBT	Subt		
	[≡♦]/[+]	SETTINGS OPT	Options		
	[≡?]/PC	APP MEDIA	Media		
	[≡i]	DISC NAV LIST	List		

