
 




 
 




	Original	Replacement		Original	Replacement
	Power		Power		0
	Up		Up		-/--
	Down		Down		Guide
	Right		Right		Back
	Left		Left		PP
	OK		Ok		P/CH+
	M		Menu		P/CH-
	[i]		Info		P<P
	1		1		Pre Ch
	2		2		Vol +
	3		3		Vol -
	4		4		Mute
	5		5		I-II
	6		6		TV
	7		7		AV
	8		8		Red/Sound
	9		9		Green/Picture
					Yellow/Feature
					Blue/Install
					[≡]
					Text





Original	Replacement	Original	Replacement
 [=o]	 HOME SMART Smart		
 [=+]	 PICTURE FORMAT Format		
 [=x]/[· ·]	 ECO 3D 3D		
 [/≡]/[*]	 AD SUBT Subt		
 [=◆]/[+]	 SETTINGS OPT Options		
 [=?]/PC	 APP MEDIA Media		
 [=i]	 DISC NAV LIST List		

