
















 





 








Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 1	 1	 OK	 OK
 2	 2	 Down	 Down
 3	 3	 P-	 CH- / Page-
 4	 4	 i	 Info / Angle
 5	 5	 Format / Picture	 Picture / Format
 6	 6	 TXT	 Text / Goto
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Red/AKT	 Red / Netflix / Search
 9	 9	 Green/Timer	 Sleep / Timer
 0/AV	 AV / Input / RDS	 Green/Timer	 Green / APP / Repeat
 0/AV	 0	 Yellow/[I]	 Yellow / YouTube / Repeat
 Up	 Up	 Blue/[++]	 Blue / Prime Video / Random
 P+	 CH+ / Page+	 -O	 << / Tune-
 Right	 Right	 O+	 >> / Tune+
 Vol+	 Vol+	 -*	 I<< / Preset-
 Left	 Left	 *+	 >>I / Preset+





Original		Replacement		Original	Replacement
	PIP		Setup / OPT /		
	IDTV-?		Smart / List		
	P/C-ATS		Display / Media		
	AUX	 +  7	Shift + 7		













 

 


























 


 





	Original	Replacement	Original	Replacement
	Power			
	P+			
	P-			
	Rec			
	Play			
	Pause			
	Stop			
	<			
	>			
	<<			
	>>			











Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 1	 1	 OK	 OK
 2	 2	 P-	 CH- / Page-
 3	 3	 Down	 Down
 4	 4	 i	 Info / Angle
 5	 5	 Format / Picture	 Picture / Format
 6	 6	 TXT	 Text / Goto
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Red/AKT	 Red / Netflix / Search
 9	 9	 Green/Timer	 Green / APP / Repeat
 0/AV	 AV / Input / RDS	 Green/Timer	 Sleep / Timer
 0/AV	 0	 Yellow/[I]	 Yellow / YouTube / Repeat
 P+	 CH+ / Page+	 Blue/[++]	 Blue / Prime Video / Random
 Up	 Up	 -O	 << / Tune-
 Right	 Right	 O+	 >> / Tune+
 Vol+	 Vol+	 -*	 I<< / Preset-
 Left	 Left	 *+	 >>I / Preset+





Original	Replacement	Original	Replacement
 PIP	 Setup / OPT /		
 IDTV-?	 Smart / List		
 P/C-ATS	 Display / Media		
 AUX	 +  Shift + 7		

