 









 






 


 


 
 

 
 


 
 

 

 
 

 
 



 
 


 







 


 
 



 







 
 
 

 

 

 
 
 
 






 







 








Original	Replacement	Original	Replacement
 Power	 Power	 P+	 Ch +
 Source	 AV	 P-	 Ch -
 1	 1	 CH List	 List
 2	 2	 Smart Hub	 Smart
 3	 3	 Menu	 Menu
 4	 4	 Search	 TV/R
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 TTX/MIX	 Text	 Right	 Right
 PRE-CH	 Pre Ch	 Left	 Left
 Vol+	 Vol +	 Enter	 Ok
 Vol-	 Vol -	 Red	 Red
 Mute	 Mute	 Green	 Green

Original	Replacement	Original	Replacement
 P+	 Ch +	 P-	 Ch -
 CH List	 List	 Smart Hub	 Smart
 Menu	 Menu	 Search	 TV/R
 Tools	 Options	 Info	 Info
 Return	 Back	 Exit	 Exit
 Up	 Up	 Down	 Down
 Right	 Right	 Left	 Left
 Enter	 Ok	 Red	 Red
 Green	 Green		





Original	Replacement	Original	Replacement
	Yellow		Yellow
	Blue		Blue
	Social TV		Media
	HDMI		Subt
	3D		3D
	E-Manual		D. Menu
	P.Size		Format
	SRS		Dual
	<<		<<
	I<<		I<<
	Pause		Pause
	>>		>>
	>>I		>>I
	Rec		Rec
	Play		Play
	Stop		Stop

