



| Original | | Replacement | | Original | | Replacement | |
|---|------------|---|--------------|---|------------|---|-----------------------------|
|  | Power |  | Power |  | P < P |  | Display / Media |
|  | Up |  | Up |  | 0 |  | 0 |
|  | Left |  | Left |  | Aspect |  | Picture / Format |
|  | Right |  | Right |  | Swap |  | Back / Return |
|  | Down |  | Down |  | P - / CH - |  | CH- / Page- |
|  | M Menu |  | Menu / Home |  | P + / CH + |  | CH+ / Page+ |
|  | [i] Info |  | Info / Angle |  | Vol - |  | Vol- |
|  | OK |  | OK |  | Vol + |  | Vol+ |
|  | 1 |  | 1 |  | Mute |  | Mute / Dimmer |
|  | 2 |  | 2 |  | I - II |  | Audio / Lang I/II |
|  | 3 |  | 3 |  | [TV] |  | Smart / List |
|  | 4 |  | 4 |  | Source |  | AV / Input / RDS |
|  | 5 |  | 5 |  | Red / PIP |  | Red / Netflix / Search |
|  | 6 |  | 6 |  | Green |  | Green / APP / Repeat |
|  | 7 |  | 7 |  | Yellow |  | Yellow / YouTube / Repeat |
|  | 8 |  | 8 |  | Blue |  | Blue / Prime Video / Random |
|  | 9 |  | 9 |  | Text |  | Text / Goto |





| | Original | Replacement | | Original | Replacement |
|---|----------|--|---|----------|-------------|
|  | Timer |  Sleep / Timer |  | | |
|  | Hold |  Stop / Hold |  | | |
|  | Cancel |  Exit / Cancel / Clear |  | | |
|  | Mix |  +  Shift + Text / |  | | |
|  | Size |  Zoom / Size |  | | |
|  | Help |  Setup / OPT / |  | | |
|  | Index |  D.Menu / Top |  | | |
|  | | |  | | |
|  | | |  | | |
|  | | |  | | |
|  | | |  | | |
|  | | |  | | |
|  | | |  | | |
|  | | |  | | |
|  | | |  | | |
|  | | |  | | |

