 









 







 



 

 



 

 

 



 



 

 

 



 



 

 

 

 

 

 









Original		Replacement		Original		Replacement	
	Standby		Power		Down / CH -		CH- / Page-
	DTV / VCR		Shift + 1		Down / CH -		Down
	DTV / VCR		Shift + 4		Favorite		Fav / Marker / PC
	DTV / VCR		Display / Media		1		1
	Mute		Mute / Dimmer		2		2
	Info		Info / Angle		3		3
	Pause		Pause / Step / Freeze		Game		Smart / List
	Menu		Menu / Home		4		4
	EPG		Guide / EPG / -/--		5		5
	Exit		Exit / Cancel / Clear		6		6
	Up / CH +		CH+ / Page+		Recall		Back / Return
	Up / CH +		Up		7		7
	Left / Vol -		Left		8		8
	Left / Vol -		Vol-		9		9
	OK		OK		0		0
	Right / Vol +		Right		TV / Radio		TV/Radio /
	Right / Vol +		Vol+		Audio		Audio / Lang I/II





Original	Replacement	Original	Replacement
 Subtitle	 Subtitle / EQ		
 Text	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

