




 



 



 



 



 



 

 

 

 



 

 

 

 

 

 

 













 












Original	Replacement	Original	Replacement
 Power	 Power	 CH/Page-	 Ch -
 CBL/SAT	 Shift + 1	 Sleep	 Sleep
 DVD	 Shift + 2	 Eco	 3D
 Tv Audio	 Dual	 Vol+	 Vol +
 Blu-ray	 Shift + 3	 Vol-	 Vol -
 AUX1	 Shift + 4	 Mute	 Mute
 Tuner	 Shift + 5	 Info	 Info
 Bluetooth	 Shift + 6	 Option	 Options
 Game	 Shift + 7	 Back	 Back
 AUX2	 Shift + 8	 Setup	 Menu
 Phono	 Shift + 9	 Up	 Up
 USB	 Pre Ch	 Down	 Down
 Media Player	 Media	 Right	 Right
 CD	 Guide	 Left	 Left
 Heos	 Shift + 0	 Enter	 Ok
 Internet Radio	 TV/R	 Home	 Smart
 CH/Page+	 Ch +	 Stop	 Stop






 


 



 




 


 








 











 

 



 









 

 
 









Original		Replacement		Original		Replacement	
	Pause		Pause		4		4
	Play		Play		5		5
	I<</Tune-		I<<		6		6
	>>I/Tune+		>>I		7		7
	<<		<<		8		8
	>>		>>		9		9
	Smart Select 1		D. Menu		0		0
	Smart Select 2		Text				
	Smart Select 3		Eject				
	Smart Select 4		AV				
	Green/Movie		Green				
	Red/Music		Red				
	Blue/Game		Blue				
	Yellow/Pure		Yellow				
	1		1				
	2		2				
	3		3				


 


 



 

 
 
 

 



 



 

 




Original	Replacement	Original	Replacement
 Power	 Power	 CH/Page-	 Ch -
 CBL/SAT	 Shift + 1	 Sleep	 Sleep
 DVD	 Shift + 2	 Vol+	 Vol +
 Tv Audio	 Dual	 Vol-	 Vol -
 Blu-ray	 Shift + 3	 Mute	 Mute
 AUX1	 Shift + 4	 Up	 Up
 Tuner	 Shift + 5	 Down	 Down
 Bluetooth	 Shift + 6	 Right	 Right
 Game	 Shift + 7	 Left	 Left
 AUX2	 Shift + 8	 Enter	 Ok
 Phono	 Shift + 9	 Back	 Back
 USB	 Pre Ch	 Home	 Smart
 Media Player	 Media	 Stop	 Stop
 CD	 Guide	 Pause	 Pause
 Internet Radio	 Shift + 0	 Play	 Play
 CH/Page+	 TV/R	 I<</Tune-	 I<<
 CH/Page+	 Ch +	 >>/Tune+	 >>I






 


 



 




 


 








 











 

 



 









 

 
 









Original		Replacement		Original		Replacement	
	<<		<<				
	>>		>>				
	Smart Select 1		D. Menu				
	Smart Select 2		Text				
	Smart Select 3		Eject				
	Smart Select 4		AV				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				





Original	Replacement	Original	Replacement
 Power	 Power	 CH/Page-	 Ch -
 CBL/SAT	 Shift + 1	 Sleep	 Sleep
 DVD	 Shift + 2	 Vol+	 Vol +
 Tv Audio	 Dual	 Vol-	 Vol -
 Blu-ray	 Shift + 3	 Mute	 Mute
 AUX1	 Shift + 4	 Up	 Up
 Tuner	 Shift + 5	 Down	 Down
 Bluetooth	 Shift + 6	 Right	 Right
 Game	 Shift + 7	 Left	 Left
 AUX2	 Shift + 8	 Enter	 Ok
 Phono	 Shift + 9	 Back	 Back
 USB	 Pre Ch	 Home	 Smart
 Media Player	 Media	 Stop	 Stop
 CD	 Guide	 Pause	 Pause
 Internet Radio	 Shift + 0	 Play	 Play
 CH/Page+	 TV/R	 I<</Tune-	 I<<
 CH/Page+	 Ch +	 >>/Tune+	 >>I





Original		Replacement		Original		Replacement	
	<<		<<				
	>>		>>				
	Smart Select 1		D. Menu				
	Smart Select 2		Text				
	Smart Select 3		Eject				
	Smart Select 4		AV				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

