
 





 
 









 
 
 

 




Original	Replacement	Original	Replacement
	Power		Power
	Audio		Dual
	Subtl		Subt
	Sleep		Sleep
	USB		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/Radio		TV/R
	Recall		Pre Ch

Original	Replacement	Original	Replacement
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Text		Text
	P+		Ch +
	P-		Ch -
	Info		Info
	Entrada		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu
	Salir		Exit
	Imagen		Format
	Sonido		Shift + Dual





	Original	Replacement	Original	Replacement
	Tamaño	 3D		
	Guía	 Guide		
	Play	 Play		
	Pause/TS	 Pause		
	Detener	 Stop		
	Grabar	 Rec		
	List	 List		
	Red	 Red		
	I<<	 I<<		
	Green	 Green		
	>>I	 >>I		
	Yellow	 Yellow		
	<<	 <<		
	Blue	 Blue		
	>>	 >>		

