 

 

 

 

 


 
 






 

 









 
 


 



 

 
 


 
 
 
 










 

 

 

 






 
 
 

 

 
 



 

 

 

 
 





 
 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	I/II/Audio		Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	List/+10		Guide
	Recall/Program		Back
	Tv Menu		Menu
	Exit		Exit
	Goto/Text		Text
	Info/Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/DVD Setup		Red
	Green/A-B		Green





Original	Replacement	Original	Replacement
 Yellow/Angle	 Yellow		
 Blue/Repeat	 Blue		
 Subtitle	 Subt		
 Play/Hold	 Play		
 Pause	 Pause		
 Size	 Format		
 D.Dis/Reveal	 3D		
 D.Menu/Mix	 D. Menu		
 Zoom/Index	 Shift + Eject		
 I<</FAV	 I<<		
 >>I/Subpage	 >>I		
 Stop	 Stop		
 Tv/Radio	 TV/R		
 <<	 <<		
 >>	 >>		
 Eject/EPG	 Eject		

