



Original	Replacement	Original	Replacement
Guide	Guide / EPG / -/--		Play / Slow
Power	Power		Pause / Step / Freeze
Eject	Eject / Surround		<< / Tune-
Tv/Radio	TV/Radio /		>> / Tune+
Red/Goto	Red / Netflix / Search	D.Setup	Setup / OPT /
Green/Angle	Green / APP / Repeat	Rec	Rec / Rec Mode
Yellow/Repeat	Yellow / YouTube / Repeat	Stop	Stop / Hold
Blue/A-B	Blue / Prime Video / Random		I<< / Preset-
FAV	Fav / Marker / PC		>>I/Index
Text	Text / Goto		Menu / Home
Freeze/Hold	Shift + Pause / Step /	Lang/Audio	Audio / Lang I/II
D.Menu	D.Menu / Top		Up
Subtitle	Subtitle / EQ		Left
Zoom/Size	Zoom / Size		OK
Aspect	Shift + Picture / Format		Right
Subpage	Info / Angle		Sleep / Timer
Media	Shift + Display / Media		Down

Original	Replacement	Original	Replacement
Guide	Guide / EPG / -/--		Play / Slow
Power	Power		Pause / Step / Freeze
Eject	Eject / Surround		<< / Tune-
Tv/Radio	TV/Radio /		>> / Tune+
Red/Goto	Red / Netflix / Search	D.Setup	Setup / OPT /
Green/Angle	Green / APP / Repeat	Rec	Rec / Rec Mode
Yellow/Repeat	Yellow / YouTube / Repeat	Stop	Stop / Hold
Blue/A-B	Blue / Prime Video / Random		I<< / Preset-
FAV	Fav / Marker / PC		>>I / Preset+
Text	Text / Goto		Menu / Home
Freeze/Hold	Shift + Pause / Step /	Lang/Audio	Audio / Lang I/II
D.Menu	D.Menu / Top		Up
Subtitle	Subtitle / EQ		Left
Zoom/Size	Zoom / Size		OK
Aspect	Shift + Picture / Format		Right
Subpage	Info / Angle		Sleep / Timer
Media	Shift + Display / Media		Down





Original		Replacement	
	Title/Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--	+	Shift + Guide / EPG / -/--

Original		Replacement	
	0		0
	Back		Back / Return
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title

