


 



 

 





 





 



 

 

 

 







 





 


 
 






 







 
























 






 









| Original | Replacement |
|--|---|
|  Power |  Power |
|  VCR/DVD |  Media |
|  DVD Timer |  Green |
|  VCR Timer |  Red |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0/AUX |  0 |
|  X/Cancel |  Exit |
|  Showview/Video Plus+ |  Guide |
|  Prog/Check |  Sleep |

| Original | Replacement |
|--|--|
|  Display |  Info |
|  On Screen/Progressiv |  3D |
|  Top |  Shift + Menu |
|  Menu |  Menu |
|  Set Up |  Options |
|  Return |  Back |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  I<</Previous |  I<< |
|  >>I/Next |  >>I |
|  <</Slow- |  << |
|  Play/Select |  Play |
|  >>/Slow+ |  >> |
|  Stop/Clear |  Stop |





 



 
 





| Original | Replacement | Original | Replacement |
|--|---|--|--|
|  Power |  Power |  Prog/Check |  Sleep |
|  VCR/DVD |  Media |  Display |  Info |
|  DVD Timer |  Green |  On Screen/Progressiv |  3D |
|  VCR Timer |  Red |  Top |  Shift + Menu |
|  1 |  1 |  Menu |  Menu |
|  2 |  2 |  Set Up |  Options |
|  3 |  3 |  Return |  Back |
|  4 |  4 |  Up |  Up |
|  5 |  5 |  Down |  Down |
|  6 |  6 |  Right |  Right |
|  7 |  7 |  Left |  Left |
|  8 |  8 |  Enter |  Ok |
|  9 |  9 |  I<</Previous |  I<< |
|  0/AUX |  0 |  >>/Next |  >>I |
|  X/Cancel |  Exit |  <</Slow- |  << |
|  Memory/Mark |  Smart |  Play Select |  Play |
|  Showview/Video Plus+ |  Guide |  >>/Slow+ |  >> |






 







 



 







 












| Original | Replacement | Original | Replacement |
|--|---|----------|-------------|
|  Stop/Clear |  Stop | | |
|  Pause |  Pause | | |
|  Rec |  Rec | | |
|  Remain/Rec |  Shift + Rec | | |
|  ↔ |  Pre Ch | | |
|  → |  Blue | | |
|  Angle/Live Check |  AV | | |
|  Subtitle |  Subt | | |
|  TV/DVD-TV/VCR |  TV/R | | |
|  Mute/Audio |  Mute | | |
|  PR+ |  Ch + | | |
|  PR- TV/CBL/DVD |  Ch - | | |
|  Vol+ Tv |  Vol + | | |
|  Vol- Tv |  Vol - | | |
| | | | |
| | | | |
| | | | |





| Original | Replacement |
|--|--|
|  Power |  Power |
|  VCR/DVD |  Media |
|  DVD Timer |  Green |
|  VCR Timer |  Red |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0/AUX |  0 |
|  Prog/Check |  Sleep |
|  Display |  Info |
|  Top |  Shift + Menu |

| Original | Replacement |
|--|---|
|  Menu |  Menu |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  I<</Previous |  I<< |
|  >>/Next |  >>I |
|  <</Slow- |  << |
|  Play/Select |  Play |
|  >>/Slow+ |  >> |
|  Stop/Clear |  Stop |
|  Pause |  Pause |
|  Rec |  Rec |
|  Remain/Rec |  Shift + Rec |
|  |  Pre Ch |
|  |  Blue |



