











Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		Enter		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Exit		Exit / Cancel / Clear
	7		7		Display		Display / Media
	8		8		Vol+		Vol+
	9		9		MTS		Shift + Smart / List
	DTV/ATV		Shift + AV / Input / RDS		CH+		CH+ / Page+
	0		0		Vol-		Vol-
	Recall		Back / Return		Rec List/D.Setup		Setup / OPT /
	P.Mode		Picture / Format		Rec List/D.Setup		Smart / List
	S.Mode		Sound / Title		CH-		CH- / Page-
	Sleep		Sleep / Timer		Rec		Rec / Rec Mode





Original	Replacement	Original	Replacement
Open/Close	Eject / Surround	D.Menu/Reveal	D.Menu / Top
Play	Play / Slow	Size/D.Title	Shift + Sound / Title
Pause/Timeshift	Pause / Step / Freeze	Size/D.Title	Shift + Zoom /
Stop/Freeze	Stop / Hold	Goto/Hold	Shift + Stop /
<<<	<<< / Tune-	Goto/Hold	Shift + Text /
Guide	Guide / EPG / -/-	Text/D.Display	Shift + Display / Media
>>>	>>> / Tune+	Text/D.Display	Text / Goto
Aspect	Shift + Picture / Format	Red/Prog	Shift + TV/Radio / Program
I<<<	I<<< / Preset-	Red/Prog	Red / Netflix / Search
Tv/Radio	TV/Radio /	Green/Step	Shift + Pause / Step /
>>>I	>>>I / Preset+	Green/Step	Green / APP / Repeat
FAV List	Fav / Marker / PC	Yellow/Repeat	Yellow / YouTube / Repeat
Zoom/Index	Zoom / Size	Yellow/Repeat	Shift + Green / APP /
Angle/Cancel	Shift + Exit / Cancel / Clear	Cyan/A-B	Blue / Prime Video / Random
Angle/Cancel	Info / Angle	Cyan/A-B	Shift + Yellow / YouTube /
Audio/Subpage	Audio / Lang I/II		
Subtitle	Subtitle / EQ		

