


 

 







 

 



 


















Original	Replacement	Original	Replacement
 Power	 Power	 PR +	 Up
 Mute	 Mute	 PR -	 Ch -
 1	 1	 PR -	 Down
 2	 2	 Vol +	 Vol +
 3	 3	 Vol +	 Right
 4	 4	 Vol -	 Vol -
 5	 5	 Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 SWAP	 Back
 8	 8	 16:9	 Format
 9	 9	 White / i	 Info
 0	 0	 Red	 Red
 --	 GUIDE	 Green	 Green
 AV / TV	 TV/R	 Yellow	 Yellow
 Menu	 Menu	 Blue	 Blue
 TXT	 Text	 Stop	 Stop
 PR +	 Ch +	 Reveal	 Smart

Original	Replacement	Original	Replacement
 PR +	 Up	 TV	 AUX
 PR -	 Ch -	 DVD	 SAT
 PR -	 Down	 SLEEP	 REC MODE
 Vol +	 Vol +	 PLAY MODE	 STOP
 Vol +	 Right	 PAUSE	 EJECT
 Vol -	 Vol -	 SKIP BACKWARD	 SKIP FORWARD
 Vol -	 Left	 SKIP STOP	 REPEAT
 OK	 Ok	 DISC NAV	 SOUND
 SWAP	 Back	 DUAL	 AD
 16:9	 Format	 SUBT	 SETTINGS
 White / i	 Info	 SEARCH	 PICTURE
 Red	 Red	 E-MANUAL	 ECO
 Green	 Green	 REPEAT	 3D
 Yellow	 Yellow	 ZOOM	 TIMER
 Blue	 Blue	 D.MENU	 AV
 Stop	 Stop	 TOP MENU	 DISPLAY INFO
 Reveal	 Smart	 MENU	 OK





Original	Replacement	Original	Replacement
Double	Media		
SUB	Subt		
MIX	Shift + Text		
Update	Eject		

