 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Display		Info
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Subtitle		Subt
	Sleep		Sleep
	P.Size		Format
	Nicam/A2		Options
	Auto		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Guide
	Rec/PVR USB		Back
	I<< USB		I<<
	>>I USB		>>I
	<< USB		<<
	>> USB		>>
	Media USB		Media
	Play USB		Play
	Pause USB		Pause
	Stop USB		Stop
	Rec/PVR USB		Rec
	Vol+ USB		Shift + Right
	Vol- USB		Shift + Left
	FAV		Pre Ch





Original	Replacement
 FAV+	 Shift + Ch +
 FAV-	 Shift + Ch -
 Menu	 Menu
 Exit	 Exit
 TV/AV	 AV
 EPG	 Shift + Guide
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Text	 Text
 Tv/Radio	 TV/R

Original	Replacement
 Hold	 Eject
 Audio	 Dual
 Index	 List
 Subpage	 Shift + Subt
 Reveal	 Smart
 Size	 3D
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Cyan	 Blue

