
 
 



 


 




 





 

 
 
 


 

 


 




 

 

 

 
 


 
 
 


 


Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 +  Shift + Ch -	Return	 Back
Slow Up	 +  Shift + Ch +	Menu Down	 Down
Stop	 Stop	Progr.	 Sleep
Pause	 Pause	Volume+	 Vol +
Subt.	 Subt	Next	 >>
Rep/A-B	 TV/R	Volume-	 Vol -
Title	 D. Menu	Top Menu	 +  Shift + Menu
Auto/Track	 List	Prev.	 <<
Repeat/1/All	 Text	1	 1
Zoom	 Eject	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	Audio	 Dual
9	 9	Echo-	 Ch -
+10	 Guide	Digest	 Format
0	 0	3D	 3D
C/CH	 Pre Ch		
Record	 Rec		
F.Forward	 >>		
Rewind	 <<		
Play	 Play		
ON/Off	 +  Shift + Power		
Video	 +  Shift + D. Menu		
Input Source	 +  Shift + AV		
R/L	 +  Shift + Info		
Mode	 Options		
Vocal/Assist	 Smart		
Echo+	 Ch +		
Tone	 Media		

