

 
 
 



 








 




 







 




 

 


 
 
 

 

 

 















 

 






 

 
 

 

 






Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit
 Home	 Smart	 CH+	 Ch +
 >>I	 >>I	 CH-	 Ch -
 I<<	 I<<	 Up	 Up
 >>	 >>	 Down	 Down
 <<	 <<	 Right	 Right
 Play	 Play	 Left	 Left
 Pause	 Pause	 OK	 Ok
 Rec	 Rec	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 EPG	 Guide	 Mute	 Mute
 SAT	 Options	 Red	 Red
 TXT	 Text	 Green	 Green
 Find	 Media	 Yellow	 Yellow
 Menu	 Menu	 Blue	 Blue
 i	 Info	 Shift	 AV
 FAV	 Pre Ch	 USB	 3D





	Original	Replacement		Original	Replacement
	Tv/Radio		TV/R		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Audio		Dual		
	Recall		Back		

