










 















 

 



 

 





Original	Replacement
 Power	 Power
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Source	 AV / Input / RDS
 TV	 TV/Radio /
 Format	 Picture / Format
 Home	 Menu / Home
 List	 Smart / List
 Info	 Info / Angle
 Adjust	 D.Menu / Top
 Options	 Setup / OPT /
 Up	 Up
 Down	 Down
 Right	 Right

Original	Replacement
 Left	 Left
 OK	 OK
 Back	 Back / Return
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Replacement		Original		Replacement	
MNO 6	6	TUNER 6	6				
7 PQRS	7	AUX - HDD 7	7				
8 TUV	8	USB 8	8				
WXYZ 9	9	BLUETOOTH 9	9				
0	0	HDMI - BAT 0	0				
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ				
TEXT	Text	GOTO TEXT	Text / Goto				

