 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 


 





 

 
 
 


 




 
 
 
 
 

 


 
 


 
 


Original	Replacement
 Power	 Power
 Eject/Auto	 Eject
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Original	Replacement
 Aspect	 Format
 Audio	 Dual
 CH+	 Ch +
 CH-	 Ch -
 Display	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 LCD Menu	 Menu
 DVD Setup/Exit	 Exit
 DVD Setup/Exit	 Options
 Input	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep





	Original	Replacement		Original	Replacement
	FAV	 +  Shift + Pre Ch		Rec	 Rec
	FAV-	 +  Shift + Ch -		Stop	 Stop
	FAV+	 +  Shift + Ch +		I<<	 I<<
	EPG	 Guide		I>>	 I>>
	Angle/Text	 Text		Red/Prog	 Red
	Zoom/Hold	 +  Shift + Eject		Green/Intro	 Green
	Tv/Radio	 TV/R		Yellow/Repeat	 Yellow
	Goto/Subpage	 3D		Blue/A-B	 Blue
	D.Disp/Reveal	 List			
	Subtitle	 Subt			
	Title/Size	 Smart			
	D.Menu/Index	 D. Menu			
	I>/Media	 Media			
	Play/Pause	 Play			
	<<	 <<			
	Play/Pause	 Pause			
	>>	 >>			

