 
 


















	Original	Replacement		Original	Replacement
	Power		Power		 1
	Mute		Mute		 2
	Tv/AV		AV		 3
	Multimedia		Media		 4
	I/II		Dual		 5
	List		List		 6
	ARC		Options		 7
	Menu		Menu		 8
	PR+		Ch +		 9
	PR-		Ch -		 0
	Up		Up		 Guide
	Down		Down		 Pre Ch
	Right		Right		 Eject
	Left		Left		 3D
	OK		Ok		 Sleep
	Vol+		Vol +		 TV/R
	Vol-		Vol -		 Text





Original	Replacement
 Win. Size	 Format
 Mix	 D. Menu
 Position	 Subt
 Time	 Exit
 Hold	 Back
 Index	 Info
 Green/PIP PR+	 Green
 Red/PIP PR-	 Red
 Yellow/Swap	 Yellow
 Blue/PIP Input	 Blue

Original	Replacement

