 









 

 



























 





 





 



















Original	Replacement	Original	Replacement
 Standby	 Power	 TV / Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Left	 Left
 EPG	 Guide / EPG / -/--	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Record	 Rec / Rec Mode
 6	 6	 Down	 Down
 Audio	 Audio / Lang I/II	 Stop	 Stop / Hold
 7	 7	 Vol +	 Vol+
 8	 8	 CH +	 CH+ / Page+
 9	 9	 Vol -	 Vol-
 Subtitle	 Subtitle / EQ	 TTX	 Text / Goto
 Info	 Info / Angle	 FAV	 Fav / Marker / PC
 0	 0	 CH -	 CH- / Page-
 Recall	 Back / Return	 Media	 Display / Media

Original	Replacement	Original	Replacement
 Standby	 Power	 TV / Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Left	 Left
 EPG	 Guide / EPG / -/--	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Record	 Rec / Rec Mode
 6	 6	 Down	 Down
 Audio	 Audio / Lang I/II	 Stop	 Stop / Hold
 7	 7	 Vol +	 Vol+
 8	 8	 CH +	 CH+ / Page+
 9	 9	 Vol -	 Vol-
 Subtitle	 Subtitle / EQ	 TTX	 Text / Goto
 Info	 Info / Angle	 FAV	 Fav / Marker / PC
 0	 0	 CH -	 CH- / Page-
 Recall	 Back / Return	 Media	 Display / Media



