 

 
 



 
 

 

 



 



 

 
 

 

 
 



 


 
 


 
 
 


 
 


 
 


 


 
 


 
 
 





 




Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 Rec List	 Smart	 Left	 Left
 CH / List	 Media	 OK	 Ok
 Subtitle	 Subt	 Menu	 Menu
 Repeat	 Shift + Text	 Exit	 Exit
 Rec	 Rec	 1	 1
 Stop	 Stop	 2	 2
 I<<	 I<<	 3	 3
 >>I	 >>I	 4	 4
 Pause	 Pause	 5	 5
 Play	 Play	 6	 6
 <<	 <<	 7	 7
 >>	 >>	 8	 8
 Source	 AV	 9	 9
 Display	 Info	 0	 0
 Up	 Up	 Recall	 Back





Original	Replacement
	Pre Ch
	Vol +
	Vol -
	Format
	Shift + Dual
	Guide
	Sleep
	Ch +
	Ch -
	Red
	Green
	Yellow
	Blue
	Text
	Shift + Exit
	TV/R
	Dual

Original	Replacement
	Shift + Pause
	Eject
	Shift + Subt
	Shift + Info

