



| Original | | Replacement | | Original | | Replacement | |
|---|--------|---|--------|---|---------|---|----------------|
|  | Power |  | Power |  | Aspect |  | Format |
|  | Auto |  | Smart |  | Nicam |  | Dual |
|  | Mute |  | Mute |  | Display |  | Info |
|  | 1 |  | 1 |  | CH + |  | Ch + |
|  | 2 |  | 2 |  | CH - |  | Ch - |
|  | 3 |  | 3 |  | Up |  | Up |
|  | 4 |  | 4 |  | Right |  | Right |
|  | 5 |  | 5 |  | Down |  | Down |
|  | 6 |  | 6 |  | Left |  | Left |
|  | 7 |  | 7 |  | Enter |  | Ok |
|  | 8 |  | 8 |  | Menu |  | Menu |
|  | 9 |  | 9 |  | Exit |  | Exit |
|  | 0 |  | 0 |  | Input |  | AV |
|  | -/-- |  | Guide |  | P.Mode |  | Shift + Format |
|  | Recall |  | Pre Ch |  | S.Mode |  | Shift + Dual |
|  | Vol + |  | Vol + |  | Sleep |  | Sleep |
|  | Vol - |  | Vol - |  | Text |  | Text |



