 





 
 
 
 

 

 

 
 
 
 
 


 



 

 
 

 
 


 
 



 
 

 
 

 
 
 
 
 
 

 
 
 

 
 


 
 
 
 


 








Original	Replacement	Original	Replacement
 Screen On/Off	 Power	 OK	 Ok
 Mute	 Mute	 1	 1
 Title	 Media	 2	 2
 Menu	 Menu	 3	 3
 Setup	 Options	 4	 4
 <<<	 <<<	 5	 5
 I<<<	 I<<<	 6	 6
 >>>I	 >>>I	 7	 7
 >>>	 >>>	 8	 8
 Stop	 Stop	 9	 9
 Play	 Play	 0	 0
 Pause	 Pause	 Angle/Program	 Sleep
 Display	 Info	 Subtitle	 Subt
 Up	 Up	 Slow/Zoom	 Eject
 Down	 Down	 Audio	 Dual
 Right	 Right	 Search	 TV/R
 Left	 Left	 Repeat	 Text





Original		Replacement		Original		Replacement	
	Vol+		Vol +				
	Vol-		Vol -				

