 

 
 

 



 

 
 
 


 
 
 





 







 


 
 


 
 
 

 
 
 
 
 
 

 
 





	Original	Replacement		Original	Replacement
	Power		Power		Search
	Open / Close		Eject		TV/R
	1		1		Options
	2		2		List
	3		3		Up
	4		4		Right
	5		5		Down
	6		6		Left
	7		7		Enter
	8		8		PBC
	9		9		Smart
	0		0		Menu
	10 +		Guide		Audio
	Display		Info		Zoom
	Subtitle		Subt		USB / Card
	Vol +		Vol +		Step II >
	Vol -		Vol -		Stop
					Play / Pause
					Play / Pause



