



































| Original | Replacement | Original | Replacement |
|--------------|---|------------|---|
| On/Off |  Power | Menu |  Menu / Home |
| Audio Off |  Mute / Dimmer | Menu Up |  Up |
| Play |  Play / Slow | Auto/Track |  Info / Angle |
| Pause |  Pause / Step / Freeze | Menu Left |  Left |
| Stop |  Stop / Hold | OK Enter |  OK |
| Record |  Rec / Rec Mode | Menu Right |  Right |
| Rewind |  << / Tune- | C/CH |  Exit / Cancel / Clear |
| F.Forward |  >> / Tune+ | Menu Down |  Down |
| Prev. |  I<< / Preset- | Return |  Back / Return |
| Next |  >>I / Preset+ | Volume+ |  Vol+ |
| Title |  Sound / Title | DVD/TV |  Smart / List |
| Subt. |  Subtitle / EQ | Slow Up |  CH+ / Page+ |
| Open/Close |  Eject / Surround | Volume- |  Vol- |
| Zoom |  Zoom / Size | Display |  Display / Media |
| Progr. |  TV/Radio / | Slow Down |  CH- / Page- |
| Top Menu |  D.Menu / Top | 1 |  1 |
| Input Source |  AV / Input / RDS | 2 |  2 |



