



| Original  |            | Replacement   |                          | Original  |           | Replacement   |                       |
|---|------------|---|--------------------------|---|-----------|---|-----------------------|
|    | Power      |    | Power                    |    | Down      |    | Down                  |
|    | Mute       |    | Mute / Dimmer            |    | Exit      |    | Exit / Cancel / Clear |
|    | Picture    |    | Picture / Format         |    | 1         |    | 1                     |
|    | Sound      |    | Sound / Title            |    | 2         |    | 2                     |
|    | Aspect     |    | Shift + Picture / Format |    | 3         |    | 3                     |
|    | Sleep      |    | Sleep / Timer            |    | 4         |    | 4                     |
|    | Subtitle   |    | Subtitle / EQ            |    | 5         |    | 5                     |
|    | CH. List   |    | Smart / List             |    | 6         |    | 6                     |
|    | EPG        |    | Guide / EPG / -/--       |    | 7         |    | 7                     |
|    | FAV        |    | Fav / Marker / PC        |    | 8         |    | 8                     |
|   | TV / Radio |   | TV/Radio /               |   | 9         |   | 9                     |
|  | Up         |  | Up                       |  | 0         |  | 0                     |
|  | Input      |  | AV / Input / RDS         |  | Recall    |  | Back / Return         |
|  | Left       |  | Left                     |  | Info      |  | Info / Angle          |
|  | OK         |  | OK                       |  | Vol +     |  | Vol+                  |
|  | Right      |  | Right                    |  | Rec       |  | Rec / Rec Mode        |
|  | Menu       |  | Menu / Home              |  | Rec. List |  | Display / Media       |



