

 



 





 



 

 




 


 










 























Original	Replacement	Original	Replacement
 Standby	 Power	 Right	 Right
 Info	 Info / Angle	 Vol+	 Vol+
 Subtitle	 Subtitle / EQ	 Record	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 CH-	 CH- / Page-
 I<<	 I<< / Preset-	 Down	 Down
 Play	 Play / Slow	 Stop	 Stop / Hold
 <<	 << / Tune-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 >>	 >> / Tune+	 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home	 4	 4
 Up	 Up	 5	 5
 CH+	 CH+ / Page+	 6	 6
 Exit	 Exit / Cancel / Clear	 Back	 Back / Return
 Vol-	 Vol-	 7	 7
 Left	 Left	 8	 8
 OK	 OK	 9	 9





 



 





 



 







 



 





 





 











 

















Original	Replacement
	0
	Display / Media
	+ Shift + 8
	TV/Radio /
	Audio / Lang I/II
	Text / Goto
	Sleep / Timer
	Fav / Marker / PC
	Smart / List
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

Original	Replacement









Original	Replacement	Original	Replacement
 Standby	 Power	 Right / Vol+	 Vol+
 Info	 Info / Angle	 Right / Vol+	 Right
 Subtitle	 Subtitle / EQ	 Record	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 Down / CH-	 Down
 I<<	 I<< / Preset-	 Down / CH-	 CH- / Page-
 Play	 Play / Slow	 Stop	 Stop / Hold
 <<	 << / Tune-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 >>	 >> / Tune+	 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home	 4	 4
 Up / CH+	 CH+ / Page+	 5	 5
 Up / CH+	 Up	 6	 6
 Exit	 Exit / Cancel / Clear	 Back	 Back / Return
 Left / Vol-	 Vol-	 7	 7
 Left / Vol-	 Left	 8	 8
 OK	 OK	 9	 9





Original		Replacement	
	0		0
	Media		Display / Media
	USB		Shift + 8
	TV / Radio		TV/Radio /
	Audio		Audio / Lang I/II
	TTX		Text / Goto
	Timer		Sleep / Timer
	Fav		Fav / Marker / PC
	Res.		Smart / List
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original		Replacement	

