






 

 

 







 













Original	Replacement
Power	Power
VCR	Shift + 2
DVD	Shift + 1
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Input Select	AV
Display / CLK/CNT	Info
Open/Close / Eject	Eject
TV / VCR	TV/R

Original	Replacement
Clear / Count. Reset	Exit
Blank Search	Green
Top Menu	Shift + Menu
Menu	Menu
Return	Back
Zoom	Shift + Eject
Angle	Format
Subtitle	Subt
Audio	Dual
Instant Replay	Shift + Play
Play	Play
<< REW	<<
FWD >>	>>
Slow	Shift + Pause
Stop	Stop
Pause Step / Still	Pause
I<< Skip	I<<





Original	Replacement	Original	Replacement
 Skip >>	 >>		
 Repeat	 Text		
 Marker	 Pre Ch		
 i / Set Up / VCR Menu	 Options		
 Up / PR/TRK +	 Up		
 Up / PR/TRK +	 Ch +		
 Down / PR/TRK -	 Down		
 Down / PR/TRK -	 Ch -		
 Right	 Right		
 Left	 Left		
 OK / Enter	 Ok		
 Auto TRK	 Smart		
 A-B RPT / SP/LP	 Vol +		
 Random / Inst	 Vol -		
 Search	 Shift + TV/R		
 Program	 Sleep		
 Rec / OTR.	 Rec		

