 



 









 



 
 

 
 















Original	Replacement
 Open/Close	 Eject / Surround
 HDD	 Shift + 7
 DVD	 Shift + 2
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog +	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog -	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Input Select	 AV / Input / RDS
 Audio	 Audio / Lang I/II

Original	Replacement
 0	 0
 Subtitle	 Subtitle / EQ
 TV / DVD	 TV/Radio /
 Red / Top Menu	 Red / Netflix / Search
 Red / Top Menu	 D.Menu / Top
 Green / Menu	 Green / APP / Repeat
 Green / Menu	 Menu / Home
 Yellow / Chapter Mark	 Yellow / YouTube / Repeat
 Blue / Erase Mark	 Blue / Prime Video / Random
 System Menu	 Smart / List
 Title List	 Sound / Title
 TV Guide	 Guide / EPG / -/--
 Schedule	 Fav / Marker / PC
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK





Original	Replacement	Original	Replacement
	Right		Shift + Rec / Rec Mode
	Back / Return		Vol+
	Down		Shift + CH+ /
	Setup / OPT /		Shift + Power
	I<< / Preset-		Vol-
	Shift + Left		Shift + CH- /
	Shift + Right		Shift + AV / Input / RDS
	>>I / Day +		
	<< / Tune-		
	Play / Slow		
	>> / Tune+		
	Display / Media		
	Pause / Step / Freeze		
	Stop / Hold		
	Rec / Rec Mode		
	Shift + Stop /		
	Shift + OK		

