







 







 



 


 


 





 





Original	Replacement
 PP	 Back / Return
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 P<P	 Fav / Marker / PC
 0	 0
 --	 Guide / EPG / -/--
 Menu [M]	 Menu / Home
 Info [i]	 Info / Angle
 I-II	 Audio / Lang I/II

Original	Replacement
 Mute	 Mute / Dimmer
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 V -	 Vol-
 V +	 Vol+
 P -	 CH- / Page-
 P +	 CH+ / Page+
 Red / Sound	 Red / Netflix / Search
 Red / Sound	 Sound / Title
 Green / Picture	 Green / APP / Repeat
 Green / Picture	 Picture / Format
 Yellow / Feature	 Yellow / YouTube / Repeat
 Blue / Install	 Blue / Prime Video / Random
 Text	 Text / Goto





	Original	Replacement		Original	Replacement
	[≡o]	TIMER SLEEP Sleep / Timer			
	Hold	HOLD Stop / Hold			
	[≡X]	CLEAR EXIT CANCEL Exit / Cancel / Clear			
	Mix / PIP Swap	LIST SMART Smart / List			
	PIP / Size	SIZE ZOOM Zoom / Size			
	PIP Down / [≡?]	PRESET- I<< / Preset-			
	PIP Up / Index	PRESET+ >>I / Preset+			
	[TV]	PROGRAM TV/RADIO TV/ Radio /			
	[AV]	RDS AV INPUT AV / Input / RDS			

