 

 



 





























 



 



 

 

 

 







 

 





 



 



















Original	Replacement	Original	Replacement
 PowerTv	 Power	 ← Time Shift	 I<< / Preset-
 NET	 Shift + Fav / Marker / PC	 Pause Time Shift	 Pause / Step / Freeze
 [i+]	 Info / Angle	 → Time Shift	 >>I / Preset+
 P.Info	 Shift + Info / Angle	 1	 1
 ATV	 Shift + 1	 2	 2
 DTV	 Shift + 2	 3	 3
 SAT	 Shift + 0	 4	 4
 Radio	 TV/Radio /	 5	 5
 Power Source	 Shift + Power	 6	 6
 << Source	 << / Tune-	 7	 7
 Play Source	 Play / Slow	 8	 8
 >> Source	 >> / Tune+	 9	 9
 Control	 Smart / List	 Recall	 Fav / Marker / PC
 Rec Source	 Rec / Rec Mode	 0	 0
 Rec Stop	 Shift + Stop /	 Source	 AV / Input / RDS
 Stop Source	 Stop / Hold	 I/II/I+II(▼/O)	 Audio / Lang I/II
 Ready Time Shift	 Sound / Title	 [<>]	 Picture / Format





Original	Replacement
 AV Mode	 Setup / OPT /
 Eco	 D.Menu / Top
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 P+	 CH+ / Page+
 [≡]	 Text / Goto
 Vol-	 Vol-
 P-	 CH- / Page-
 3D	 Zoom / Size
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 End	 Exit / Cancel / Clear
 Down	 Down

Original	Replacement
 Back	 Back / Return
 [...]	 Subtitle / EQ
 [≡?]	 Eject / Surround
 [≡o]	 Sleep / Timer
 [≡+]	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

