

 

 
 


 







 

 

 
 


 
 

 

 
 
 

 
 







 



 

 
 
 


 
 
 
 

 

 
 
 
 
 







Original	Replacement	Original	Replacement
 Power	 Power	 CH +	 Ch +
 Info	 Info	 CH -	 Ch -
 3D	 3D	 Index	 Media
 ANT	 D. Menu	 FAV	 Pre Ch
 Mute	 Mute	 Vol +	 Vol +
 1	 1	 Vol -	 Vol -
 2	 2	 Menu	 Menu
 3	 3	 Exit	 Exit
 4	 4	 Up	 Up
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 List / Repeat	 List
 0	 0	 List / Repeat	 Shift + Text
 Reveal / Source	 AV	 EPG	 Guide
 Audio I/II	 Dual	 www	 Smart





Original	Replacement	Original	Replacement
 Rec	 Rec	 Still	 Shift + Stop
 Play	 Play	 Radio	 TV/R
 Pause	 Pause	 [≡X]	 Shift + Exit
 Stop	 Stop		
 <<	 <<		
 >>	 >>		
 Aspect / Size	 Format		
 [≡o] / Subtitle	 Subt		
 T-Shift	 Options		
 Recall	 Back		
 Red	 Red		
 Green	 Green		
 Yellow / I<<	 Yellow		
 Yellow / I<<	 I<<		
 Blue / >>I	 Blue		
 Blue / >>I	 >>I		
 Text	 Text		

