



















 


















 

 








Original	Replacement	Original	Replacement
	SFR		3
	Power		4
	Up		5
	Left		6
	OK		7
	Right		8
	Down		9
	Retour		0
	<<		
	Play / Pause		
	Play / Pause		
	>>		
	V -		
	Rec		
	V +		
	1		
	2		
	Info / Angle		3
	Power		4
	Up		5
	Left		6
	OK		7
	Right		8
	Down		9
	Back / Return		0
	<< / Tune-		
	Pause / Step / Freeze		
	Play / Slow		
	>> / Tune+		
	Vol-		
	Rec / Rec Mode		
	Vol+		
	1		
	2		

