








 

 







 





 
 








 

 



 

 

 



 

 

 

 

 

 








 

| Original | Replacement |
|--|---|
|  Power |  Power |
|  TV / AV |  AV / Input / RDS |
|  TV/TXT |  Text / Goto |
|  Cancel |  Shift + Exit / Cancel / Clear |
|  Reveal |  Display / Media |
|  DTV |  D.Menu / Top |
|  Hold |  Stop / Hold |
|  Size |  Shift + Zoom / |
|  Subpage |  Eject / Surround |
|  Index |  Smart / List |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  CH+ |  CH+ / Page+ |
|  Menu |  Menu / Home |
|  Vol+ |  Vol+ |

| Original | Replacement |
|---|---|
|  CH- |  CH- / Page- |
|  Exit |  Exit / Cancel / Clear |
|  Vol- |  Vol- |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |





| Original | Replacement |
|---|---|
|  |  TV/Radio / |
|  |  0 |
|  |  Back / Return |
|  |  Picture / Format |
|  |  Sound / Title |
|  |  Audio / Lang I/II |
|  |  Mute / Dimmer |
|  |  Sleep / Timer |
|  |  Info / Angle |
|  |  Zoom / Size |
|  |  Pause / Step / Freeze |
|  |  Guide / EPG / -/-- |
|  |  Fav / Marker / PC |
|  |  I<< / Preset- |
|  |  >>I / Preset+ |
|  |  Subtitle / EQ |
|  |  +  Shift + Sleep / Timer |

| Original | Replacement |
|---|---|
|  |  Setup / OPT / |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

