 




 




 

 

 

 
 
 
 

 



 
 
 

 



 
 




 
 
 


 
 
 

 
 

 
 

 

 
 


 



 
 






| Original | Replacement | Original | Replacement |
|--|--|--|--|
|  Power |  Power |  Down |  Down |
|  Stereo |  Dual |  Left |  Left |
|  < |  Ch - |  Home |  Smart |
|  > |  Ch + |  Right |  Right |
|  BD / DVD |  1 |  Back |  Back |
|  CBL / SAT |  2 |  Vol + |  Vol + |
|  Game |  3 |  Home |  Menu |
|  NET |  4 |  Vol - |  Vol - |
|  Bluetooth |  5 |  Mute |  Mute |
|  USB |  6 |  Auto / Direct |  List |
|  Tuner |  7 |  SURR |  Subt |
|  TV |  8 |  I<< |  I<< |
|  CD |  9 |  Play / Pause |  Play |
|  AV Adjust |  AV |  Play / Pause |  Pause |
|  i / Status |  Info |  >>I |  >>I |
|  Up |  Up |  Repeat / Shuffle / Clear |  Exit |
|  Enter |  Ok |  + FAV |  Pre Ch |



