





 








 












 
 


Original	Replacement
 Timer Set	 Sleep / Timer
 Standby - On	 Power
 Prog / System	 Menu / Home
 Prog / System	 TV/Radio /
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Rec	 Rec / Rec Mode
 Display	 Display / Media
 Zoom	 Zoom / Size
 P -	 CH- / Page-
 Clear	 Shift + Exit / Cancel / Clear
 Exit / Status	 Exit / Cancel / Clear
 P +	 CH+ / Page+
 Title	 Sound / Title
 System	 Smart / List
 Return	 Back / Return

Original	Replacement
 DVD	 Shift + 2
 TUNER	 Shift + 6
 VCR	 Shift + 4
 VCR Menu	 D.Menu / Top
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Stop	 Stop / Hold
 Down	 Down
 Play	 Play / Slow
 << REW	 << / Tune-
 Pause	 Pause / Step / Freeze
 >> FF	 >> / Tune+
 1	 1
 2	 2
 3	 3





Original		Replacement	
	Slow	 + 	Shift + Play /
	4	 4	4
	5	 5	5
	6	 6	6
	SV / V+		AV / Input / RDS
	7	 7	7
	8	 8	8
	9	 9	9
	Index	 + 	Shift + Info / Angle
	0	 0	0
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Surround		Eject / Surround
	Sound	 + 	Shift + Sound / Title
	Vol -		Vol-
	Vol +		Vol+

Original	Replacement





Original	Replacement
 Timer Set	 Sleep / Timer
 Standby - On	 Power
 Prog / System	 Menu / Home
 Prog / System	 TV/Radio /
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Display	 Display / Media
 Zoom	 Zoom / Size
 I<<	 I<< / Preset-
 Clear	 Exit / Cancel / Clear
 >>I	 >>I / Preset+
 Title	 Shift + Sound / Title
 Mode	 Text / Goto
 Return	 Back / Return
 DVD	 Shift + 2
 TUNER	 Shift + 6

Original	Replacement
 VCR	 Shift + 4
 Disc Menu	 D.Menu / Top
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Stop	 Stop / Hold
 Down	 Down
 Play	 Play / Slow
 << REW	 << / Tune-
 Pause	 Pause / Step / Freeze
 >> FF	 >> / Tune+
 1	 1
 2	 2
 3	 3
 Slow	 Shift + Play /
 4	 4









































	Original	Replacement		Original	Replacement
	5		5		
	6		6		
	SV / V+		AV / Input / RDS		
	7		7		
	8		8		
	9		9		
	Search		Red / Netflix / Search		
	+10		Guide / EPG / -/--		
	0		0		
	Repeat		Green / APP / Repeat		
	Repeat A-B		Yellow / YouTube / Repeat		
	Surround		Eject / Surround		
	Sound		Sound / Title		
	Vol -		Vol-		
	Vol +		Vol+		

	Original	Replacement		Original	Replacement





Original	Replacement
 Standby - On	 Power
 Prog / System	 TV/Radio /
 Prog / System	 Menu / Home
 Band	 Smart / List
 I<<	 CH- / Page-
 I<<	 I<< / Preset-
 >>I	 CH+ / Page+
 >>I	 >>I / Preset+
 DVD	 Shift + 2
 TUNER	 Shift + 6
 VCR	 Shift + 4
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Stop	 Stop / Hold
 Down	 Down

Original	Replacement
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Surround	 Eject / Surround
 Sound	 Sound / Title
 Vol -	 Vol-
 Vol +	 Vol+

