




 
 
 

 

 



 

 



 













 








 
 








 

 


 








 


 


 




Original		Replacement		Original		Replacement	
	Power		Power		Source		AV
	Mute		Mute		Zoom		Eject
	Sleep		Sleep		Recall		Back
	Freeze		Shift + Pause		Info		Info
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		CH +		Ch +
	7		7		CH -		Ch -
	8		8		Vol +		Vol +
	9		9		Vol -		Vol -
	0		0		P.Mode		Format
	-/--		Shift + Guide		S.Mode		Dual
	Menu		Menu		Nicam		Shift + Dual
	DTV		Smart		FAV		Pre Ch





Original	Replacement
	 Exit
	 Guide
	 Text
	 Shift + Text
	 Subt
	 TV/R
	 Media
	 Play
	 Pause
	 <<<
	 >>>
	 Shift + Info
	 Rec
	 Stop
	 I<<<
	 >>>I
	 Red

Original	Replacement
	 Green
	 Yellow
	 Blue

