



Original	Replacement
 POWER	 Power
 TV	 TV/R
 VCR / AUX	 Shift + TV/R
 SLEEP	 Sleep
 TV / AV	 AV
 TUNER / BAND	 Smart
 DVD / CD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 ≧10 / -/--	 Guide
 Cancel	 Exit
 CH +	 Ch +
 CH -	 Ch -
 VOL +	 Vol +
 VOL -	 Vol -
 SKIP PREV.	 I<<
 SKIP NEXT	 >>I
 SLOW/SEARCH	 <<
 SLOW/SEARCH	 >>
 STOP	 Stop
 PAUSE	 Pause
 PLAY	 Play
 TOP MENU / DIR. NAV.	 D. Menu
 MENU / PLAY LIST	 Menu
 UP	 Up
 LEFT	 Left





Original	Replacement
 ENTER	 Ok
 RIGHT	 Right
 DOWN	 Down
 DISPLAY / TV VOL-	 Info
 DISPLAY / TV VOL-	 Shift + Vol -
 RETURN / TV VOL+	 Shift + Vol +
 RETURN / TV VOL+	 Back
 SUBWOOFER LEVEL	 3D
 SFC	 Green
 C. FOCUS	 Shift + 1
 SUPER SRND.	 Format
 DOLBY PL II	 Dual
 Mix 2CH	 Shift + Subt
 C. S. M.	 Red
 POSITION	 Pre Ch
 AUDIO	 Shift + Dual
 ZOOM	 Eject

Original	Replacement
 SETUP	 Options
 MUTING	 Mute
 FL DISPLAY	 Shift + Info
 PAGE	 Shift + 2
 GROUP	 Shift + 3
 REPEAT	 Text
 PLAY MODE	 Shift + Play
 TEST	 Yellow
 CH. SELECT	 List
 QUICK REPLAY	 Blue
 SUBTITLE	 Subt





Original	Replacement
Power	Power
Power AV	+ Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
≥ 10 / -/-	GUIDE Guide
Tv/AV	TIMER AV AV
CH+	+ Ch +
CH-	CH - Ch -
Tv Vol+	+ Vol +

Original	Replacement
Tv Vol-	Vol -





Original	Replacement		
	Power		Power
	Power AV	+	Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/--		Guide
	>>		>>
	<<		<<
	<<		<<
	>>		>>

Original	Replacement		
	Pause		Pause
	Play		Play
	Stop		Stop

