














 








 





 




 

 







 

 



 

 

 



Original	Replacement	Original	Replacement
 Power	 Power	 Pause / Still	 Pause / Step / Freeze
 1	 1	 Left / << / <<	 Left
 2	 2	 Left / << / <<	 << / Tune-
 3	 3	 Left / << / <<	 << / Preset-
 4	 4	 Right / >> / >>	 Right
 5	 5	 Right / >> / >>	 >> / Preset+
 6	 6	 Right / >> / >>	 >> / Tune+
 7	 7	 Down / Stop	 Down
 8	 8	 Down / Stop	 Stop / Hold
 9	 9	 Enter	 OK
 0 / AV	 0	 Index	 Info / Angle
 0 / AV	 AV / Input / RDS	 Cancel	 Exit / Cancel / Clear
 CH/TR. -	 CH- / Page-	 Menu	 Menu / Home
 CH/TR. +	 CH+ / Page+	 Timer Rec	 Sleep / Timer
 Rec / OTR	 Rec / Rec Mode	 Program	 TV/Radio /
 Up / Play / Slow	 Up	 Call	 D.Menu / Top
 Up / Play / Slow	 Play / Slow	 Clock / Counter	 Red / Netflix / Search

Original	Replacement	Original	Replacement
 Power	 Power	 Pause / Still	 Pause / Step / Freeze
 1	 1	 Left / << / <<	 Left
 2	 2	 Left / << / <<	 << / Tune-
 3	 3	 Left / << / <<	 << / Preset-
 4	 4	 Right / >> / >>	 Right
 5	 5	 Right / >> / >>	 >> / Preset+
 6	 6	 Right / >> / >>	 >> / Tune+
 7	 7	 Down / Stop	 Down
 8	 8	 Down / Stop	 Stop / Hold
 9	 9	Enter	OK
0 / AV	0	Index	Info / Angle
0 / AV	AV / Input / RDS	Cancel	Exit / Cancel / Clear
CH/TR. -	CH- / Page-	Menu	Menu / Home
CH/TR. +	CH+ / Page+	Timer Rec	Sleep / Timer
Rec / OTR	Rec / Rec Mode	Program	TV/Radio /
Up / Play / Slow	Up	Call	D.Menu / Top
Up / Play / Slow	Play / Slow	Clock / Counter	Red / Netflix / Search





Original	Replacement
 Counter Reset	 Green / APP / Repeat
 Zero / Return	 Yellow / YouTube / Repeat
 Zero / Return	 Back / Return
 Speed SP/LP	 Display / Media
 TV / VCR	 Smart / List
 Audio Select	 Audio / Lang I/II
 Eject	 Eject / Surround

Original	Replacement

