










 

 

 

 









 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 V.Format	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Text	 Text / Goto
 TV / Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [[≡]]	 Smart / List
 0	 0

Original	Replacement
 Recall	 Back / Return
 Vol -	 Vol-
 Vol +	 Vol+
 CH -	 CH- / Page-
 CH +	 CH+ / Page+
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Page Down	 Shift + CH- /
 Down	 Down
 Page Up	 Shift + CH+ /
 FAV	 Fav / Marker / PC
 Guide	 Guide / EPG / -/-
 Info	 Info / Angle





Original	Replacement
	 Display / Media
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Audio / Lang I/II
	 Blue / Prime Video / Random
	 Subtitle / EQ
	 Play / Slow
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Shift + Text /
	 Shift + Pause / Step /
	 << / Tune-
	 >> / Tune+
	 Zoom / Size
	 Shift + Stop /

Hold

Original	Replacement
	 I<< / Preset-
	 >>I / Preset+
	 Shift + 0
	 Picture / Format
	 Setup / OPT /
	 Shift + Setup / OPT / Tools

