



 








 

 





















 


 
 





 

 












 










Original		Replacement		Original		Replacement	
	On/Standby		Power		Display CD/USB		Info
	Open/Close		Eject		Stop CD		Stop
	1		1		Play/Pause CD		Play
	2		2		Equalizer		Dual
	3		3		X-Bass		Subt
	4		4		Memory		Rec
	5		5		Clear		Exit
	6		6		Clock/Timer		AV
	7		7		Sleep		Sleep
	8		8		Volume+		Vol +
	9		9		Volume-		Vol -
	0		0		Mute		Mute
	10+		Guide		Preset Up		Ch +
	Play Mode		Shift + Play		Preset Down		Ch -
	Display(Tv Out) iPod		TV/R		Tuning/Folder Up		>>
	Menu iPod		Menu		Tuning/Folder		<<
	Play/Pause iPod		Pause		Up		Up





Original	Replacement	Original	Replacement
 Down	 Down		
 Right/>>>I	 Right		
 Left/ <<	 Left		
 Enter	 Ok		
 iPod	 Green		
 CD	 Yellow		
 USB	 Blue		
 AUX	 Red		
 Tuner(Band)	 Smart		
 ASPM RDS	 Text		
 PTY RDS	 3D		
 Display RDS	 Format		

