





 

 


 
 
 


 
 

 
 
 

 

 



 



 

 

 


 
 




 

 





 
 




 











Original		Replacement		Original		Replacement	
	Power		Power		P -		Ch -
	1		1		[≡□] / Source		AV
	2		2		[≡i] / Menu		Menu
	3		3		TTX / MIX		Text
	4		4		[≡?] / Info		Info
	5		5		Exit / TV		Exit
	6		6		Up		Up
	7		7		Left		Left
	8		8		Enter		Ok
	9		9		Right		Right
	0		0		Down		Down
	[≡⇅] / Sleep		Shift + Power		Red / P.Size		Red
	[≡●] / Pre-CH		Pre Ch		Green / Still		Green
	Mute		Mute		Yellow / Dual I-II		Yellow
	Vol +		Vol +		Yellow / Dual I-II		Dual
	Vol -		Vol -		Blue / SRS		Blue
	P +		Ch +		PIP		Smart





Original	Replacement	Original	Replacement
SOURCE	APP MEDIA Media		
PIP P +	SHIFT + + CH Shift + Ch +		
PIP P -	SHIFT + CH - Shift + Ch -		
PIP Size	SHIFT + HOME SMART Shift + Smart		
P.MODE → □ ← / P.Mode	PICTURE FORMAT Format		
S.MODE [≡X] / S.Mode	SHIFT + SOUND DUAL Shift + Dual		
E.SAVING	ECO 3D		

