





Original	Replacement
 On / Off	 Power
 Mute	 Mute / Dimmer
 CD / DVD	 Shift + 3
 FM / AM	 TV/Radio /
 Tape	 Shift + 5
 TV	 Shift + 1
 VCR	 Shift + 4
 AUX	 Shift + 7
 DVD Menu	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 Settings	 Setup / OPT /
 Up / Tune +	 Up
 Left / Seek -	 Left
 Enter	 OK
 Right / Seek +	 Right
 Down / Tune -	 Shift + Down
 Down / Tune -	 Down

Original	Replacement
 Ch./Chap./Preset/ Track +	 CH+ / Page+
 Volume +	 Vol+
 Ch./Chap./Preset/ Track -	 CH- / Page-
 Volume -	 Vol-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow





Original		Replacement		Original	Replacement
	<<		<< / Tune-		
	<<	+	Shift + << /		
	>>		>> / Tune+		
	Shuffle		Blue / Prime Video / Random		
	Repeat		Green / APP / Repeat		
	Speakers 2-3-5		Audio / Lang I/II		
	Surround -	+	Shift + Vol-		
	Surround +	+	Shift + Vol+		





Original	Replacement
 On / Off	 Power
 Mute	 Mute / Dimmer
 CD / DVD	 Shift + 3
 FM / AM	 TV/Radio /
 Tape	 Shift + 5
 TV	 Shift + 1
 VCR	 Shift + 4
 AUX	 Shift + 7
 DVD Menu	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 Settings	 Setup / OPT /
 Up / Tune +	 Up
 Left / Seek -	 Left
 Enter	 OK
 Right / Seek +	 Right
 Down / Tune -	 Down
 Ch./Chap./Preset/Track +	 CH+ / Page+

Original	Replacement
 Volume +	 Vol+
 Ch./Chap./Preset/Track -	 CH- / Page-
 Volume -	 Vol-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
	 << / Tune-





Original	Replacement
<<	+ Shift + << /
>>	>> / Tune+
>>	+ Shift + >> /
	Blue / Prime Video / Random
	Green / APP / Repeat
	Audio / Lang I/II
	+ Shift + Vol-
	+ Shift + Vol+

Original	Replacement

