


 
 

 







 
 



 

 



 





Original		Replacement		Original		Replacement	
	Power		Power		Display		Info
	Mute		Mute		Sleep		Sleep
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		FAV/List		Shift + Pre Ch
	6		6		Clock		Shift + AV
	7		7		List		List
	8		8		Tv/Radio		TV/R
	9		9		Aspect		Format
	0		0		Freeze		Pause
	-/--		Guide		Index		Options
	Recall		Pre Ch		Cancel		Back
	Menu		Menu		Subpage		Subt
	Source		AV		Text		Text
	Exit		Exit		Size		Eject





Original		Replacement		Original		Replacement	
	Reveal		Media				
	Hold		Dual				
	Mix		Shift + Media				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Cyan		Blue				
	Nicam		Smart				
	P.Mode		Shift + Format				
	S.Mode		Shift + Dual				
	OK		Ok				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				

