



 

 
 








 









 





 




Original	Replacement
 Power	 Power
 Mute	 Mute
 Display	 Info
 Exit	 Exit
 TV / AV	 AV
 SYS	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

Original	Replacement
 Recall	 Pre Ch
 V +	 Vol +
 V -	 Vol -
 P +	 Ch +
 P -	 Ch -
 Up	 Up
 Left	 Left
 Menu	 Menu
 Menu	 Ok
 Right	 Right
 Down	 Down
 SMode	 Format
 PMode	 Shift + Dual
 Sleep	 Sleep
 Nicam	 Dual
 Hold	 Stop
 Index	 Media





	Original	Replacement	
PGUP	PGUP	SHIFT + CH	Shift + Ch +
SIZE	Size	ZOOM	Eject
PGDN	PGDN	SHIFT + CH	Shift + Ch -
TEXT	Text	REPEAT TEXT	Text
REVEAL	Reveal	SETTINGS OPT	Options
SUBPAGE	Subpage	AD SUBT	Subt
RED	Red	A	Red
GREEN	Green	B	Green
YELLOW	Yellow	C	Yellow
BLUE	Blue	D	Blue

Original	Replacement

