 









 





















 










 

 

 








 





 













Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 Mode	 D.Menu / Top
 4	 4
 5	 5
 6	 6
 Audio Mode	 Audio / Lang I/II
 7	 7
 8	 8
 9	 9
 Sound Select	 Sound / Title
 0	 0
 Screen Mode	 Smart / List

Original	Replacement
 Menu	 Menu / Home
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 i	 Info / Angle
 Vol +	 Vol+
 Mute	 Mute / Dimmer
 P +	 CH+ / Page+
 Vol -	 Vol-
 P -	 CH- / Page-
 TV / Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Color System	 Picture / Format
 Reveal	 Shift + Back / Return
 Expand	 Display / Media
 Sub Code	 Shift + Setup / OPT / Tools
 [=]	 Text / Goto
 [...]	 Setup / OPT /
 [=i]	 Shift + Info / Angle
 [=□]	 Stop / Hold

Original	Replacement

